# Honeywell



# **Model 3124**

# Tension/Compression In-Line Load Cell

#### **DESCRIPTION**

The small-diameter, cost-efficient load cells are designed to be used in applications that require an ability to mount in an existing system with restricted working area. They are commonly used in fluid power transfer systems. Their low cost and ease of mounting allow simultaneous testing of multi-element systems.

They may be directly attached to the piston rod of a hydraulic cylinder. Side-mounted cable connectors allow cable assemblies to be supported without affecting movement of the cell during tension or compression loading.

#### **FEATURES**

- 5000 lb to 25000 lb range
- 0.25 % non-linearity
- 0.15 % hysteresis
- Adapts directly to hydraulic cylinder
- Small diameter allows mounting in restricted areas
- Low deflection



# **Model 3124**

### PERFORMANCE SPECIFICATIONS

Characteristic	Measure			
Load range <sup>1</sup>	5000, 10000, 15000, 20000, 25000 lb			
Non-linearity	±0.25 % of rated output			
Hysteresis	±0.15 % of rated output			
Repeatability	±0.05 % of rated output			
Output @ rated capacity	±2 mV/V (nominal)			
Operation	Tension/compression			
Resolution	Infinite			
Standard calibration	Tension (+) and compression (-)			

### **ENVIRONMENTAL SPECIFICATIONS**

Characteristic	Measure		
Temperature, operating	-54 °C to 93 °C [-65 °F to 200 °F]		
Temperature, compensated	21 °C to 77 °C [70 °F to 170 °F]		
Temperature effect, zero	±0.002 % of rated output/°F		
Temperature effect, output	±0.002 % of reading/°F		

### **ELECTRICAL SPECIFICATIONS**

Characteristic	Measure		
Strain gage type	Foil		
Excitation (maximum)	20 Vdc or Vac RMS		
Insulation resistance	> 5000 mOhm @ 50 Vdc		
Bridge resistance (tolerance)	350 ohm		
Number of bridges	1 or 2		
Zero balance	±1.0 %		


#### **MECHANICAL SPECIFICATIONS**

Characteristic	Measure		
Static overload capacity	150 % of nominal capacity		
Material	Carbon steel		
Natural frequency	See table		

### **RANGE CODES**

Range Code	Available ranges
DR	5000 lb
DV	10000 lb
EJ	15000 lb
EL	20000 lb
EM	25000 lb

#### TYPICAL SYSTEM DIAGRAM

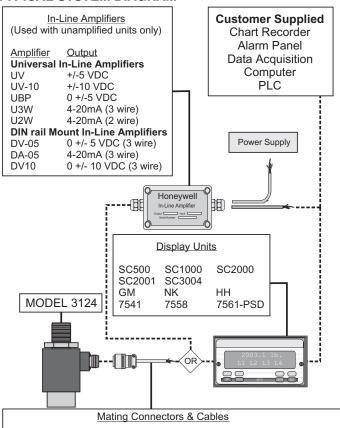

064-LW13621 Mating connector

7200-76-XX\* Mating connector and six conductor cable

(unamplified unit with sense leads but not shunt cal)

7200-75-XX\*\* Mating connector (MS - 5 pin) and four conductor cable

(unamplified sensor without sense leads)

7200-111-XX\*\* Mating connector (MS - 5 pin) & 6 conductor cable

for connection to 7541

7200-110-XX\*\* Mating connector (MS - 5 pin ) & 4 conductor cable

for connection to 7541

\* XX represents length in feet 100ft maximum

\*\* XX represents length in feet 20ft maximum


# Tension/Compression In-Line Load Cell

## **NATURAL FREQUENCY**

Nominal load limit capacity F <sub>z</sub>				Static extran	Static extraneous load limits			
lb	N	Static overload capacity (% of nominal capacity)	Fatigue capacity (% of nominal capacity)	Shear F <sub>x</sub> or F <sub>y</sub> (lb)	Bending M <sub>x</sub> or M <sub>y</sub> (lb-in)	Torque M <sub>z</sub> (lb-in)	Deflection at nominal load limit (in)	Ringing frequency (Hz)
5K	20K	150	n/a	250	750	15000	0.005	4600
10K	50K	150	n/a	250	700	1100	0.005	6400
15K	75K	150	n/a	450	1300	2100	0.005	7700
20K	100K	150	n/a	650	2000	3000	0.005	8800
25K	125K	150	n/a	950	2700	4500	0.005	9600

## **MOUNTING DIMENSIONS**

Model	A cm [in]	B cm [in]	C cm [in]	D cm [in]	E cm [in]	F cm [in]	G cm [in]	H cm [in]
3124	11,43 [4.50]	2,54 [1.0]	0,97 [0.38]	2,06 [0.81]	3,81 [1.50]	3,51 [1.38]	6,20 [2.44]	4,37 [1.72]

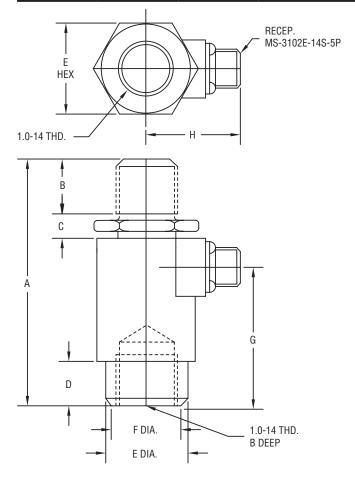

## **Model 3124**

#### **NOTES**

1. This unit calibrated to Imperial (non-Metric) units.


# Tension/Compression In-Line Load Cell

Warranty. Honeywell warrants goods of its manufacture as being free of defective materials and faulty workmanship. Honeywell's standard product warranty applies unless agreed to otherwise by Honeywell in writing; please refer to your order acknowledgement or consult your local sales office for specific warranty details. If warranted goods are returned to Honeywell during the period of coverage, Honeywell will repair or replace, at its option, without charge those items it finds defective. The foregoing is buyer's sole remedy and is in lieu of all warranties, expressed or implied, including those of merchantability and fitness for a particular purpose. In no event shall Honeywell be liable for consequential, special, or indirect damages.

While we provide application assistance personally, through our literature and the Honeywell web site, it is up to the customer to determine the suitability of the product in the application.

Specifications may change without notice. The information we supply is believed to be accurate and reliable as of this printing. However, we assume no responsibility for its use.

For more information about Sensing and Control products, visit www.honeywell.com/sensing or call +1-815-235-6847 Email inquiries to info.sc@honeywell.com

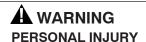

• DO NOT USE these products as safety or emergency stop devices or in any other application where failure of the product could result in personal injury.

Failure to comply with these instructions could result in death or serious injury.



- The information presented in this catalogue is for reference only. DO NOT USE this document as product installation information.
- Complete installation, operation and maintenance information is provided in the instructions supplied with each product.

Failure to comply with these instructions could result in death or serious injury.

Sensing and Control
Automation and Control Solutions
Honeywell
1985 Douglas Drive North
Golden Valley, MN 55422 USA
+1-815-235-6847

Honeywell